


J06C045D OFFSHORE CONTRACTING

KNEE BRACES

TIMBER SCHEDULE

PART	TIMBER
A	6 X 8
B	4 X 6
C	4 X 6

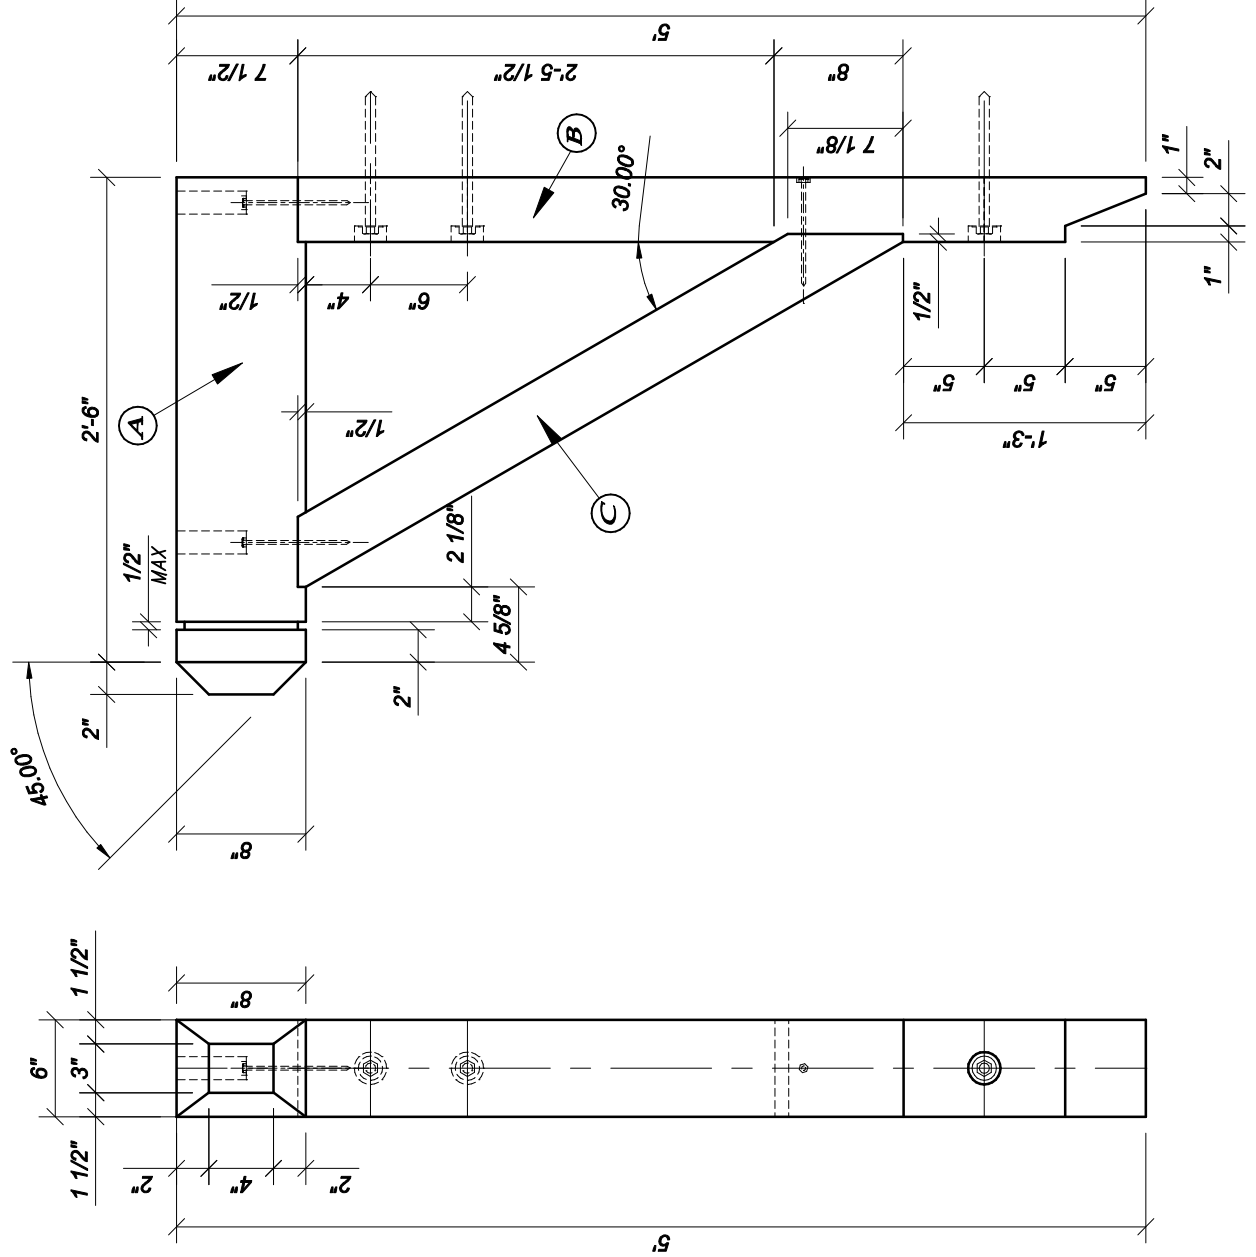

NOTES

1. TIMBERS ARE ALL CEDAR, SS, FOHC, BANDSAWN
2. CONNECT WITH 6" X 1/4" SCREWS, C/S TO FLUSH WITH TIMBER SURFACE
3. BEVEL ALL EDGES 1/4"
4. ATTACH TO STRUCTURE WITH 5/8" LAG BOLTS W/ WASHERS THROUGH PACK PLATE - C/ S 1" & FIELD ATTACH DOWEL PLUGS SPECIFIED BY OTHERS